


1 H2OMAN G3 mp3 player

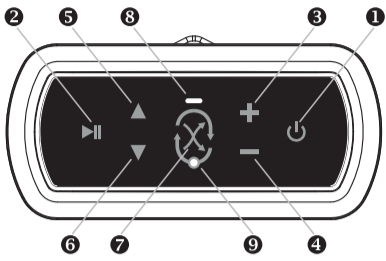

- ① Power On\Off Button
- ② Play\Pause Button
- ③ Up Volume Button
- ④ Down Volume Button
- ⑤ Previous Track Button
- ⑥ Next Track Button
- ⑦ Shuffle\Repeat One
- ⑧ Denote Wrong LED
- ⑨ Denote Shuffle LED


Specification

Power	Polymer Battery 3.7V 550mAH
Play Time	> 13hrs
Max Power	50mW
Signal-to-Noise	> 70dB
Distortion	< 0.1%
Separate	> 70dB


2 LED Denote for the MP3 Player

Blue LED	Press the Power button for about 2 seconds , then the LED will start to flash quickly (denote to Search) ; as you listen some sound as the LED change to flash slowly (denote to Play) ; after you press the pause button then the LED will become flash once for some time
Green LED	Press the Shuffle button then the LED flash (denote to play at random) , press the shuffle button again then the LED change to keep flash two times (denote to repeat play one file)
Red LED	Used to Denote Wrong Operate , such as un-insert TF card or no support files to play.


3 Plug-in the Micro SD Card flash memory

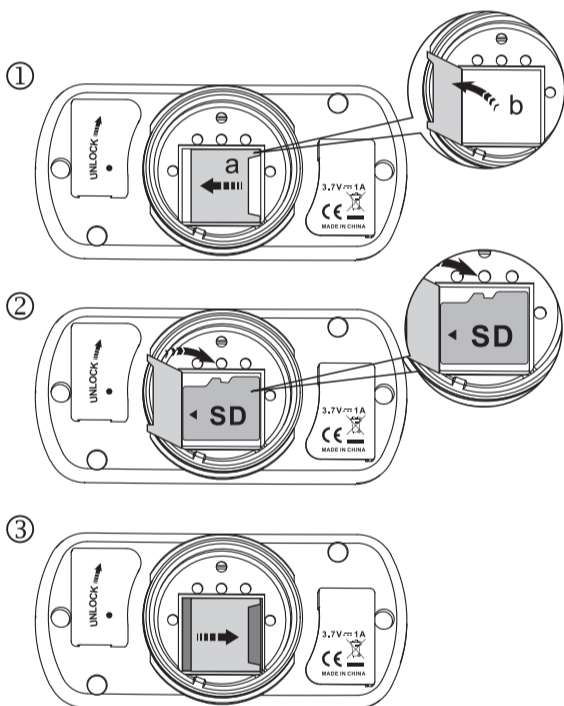

4 Install/Release the Headphone

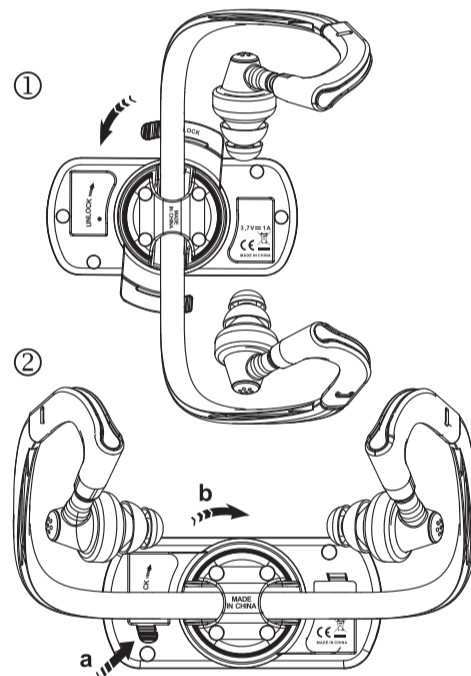


5 Install the Charger

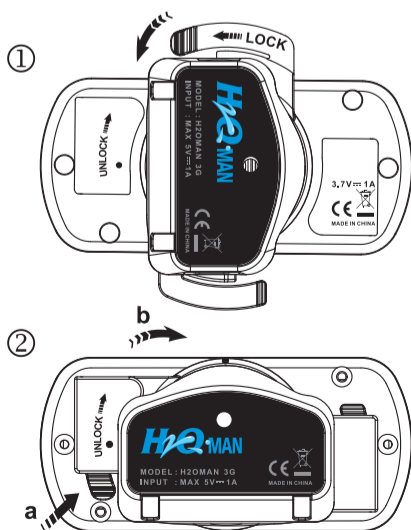

LED Denote for the charger

- Red Color Lighted denote Charging.
- Green Color Lighted denote Full Charge.
- Keep Lighting Green and Flash Red denote Abnormal Charging.

6 Charging the SD Card MP3 Player

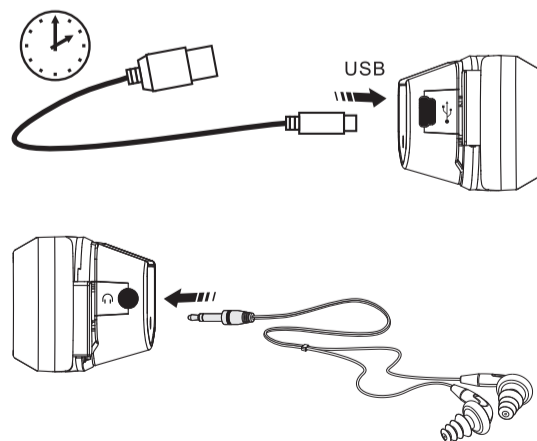

Charger Specification

Input	5V\1A
Electric Current Max Input	500mAh
Charge Time	2hrs approx.